

# WALL FAN HEATER



USER MANUAL

## IMPORTANT SAFEGUARDS

1. Please read these instructions carefully before using the appliance.
2. Check that your mains voltage corresponds to that stated on the rating plate of the appliance.
3. Keep out of reach of children or incompetent persons.
4. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
5. Only use the appliance for domestic purposes and in the way indicated in these instructions.
6. Never immerse the appliance in water or any other liquid for any reason whatsoever. When cleaning the appliance, refer to the instructions in the paragraph "Cleaning and care" because the water penetration through the openings can be very dangerous for your appliance.
7. Never use the appliance near hot surfaces.
8. Before cleaning and when you do not use the appliance, always unplug the appliance from the power supply. Do not attempt to remove the plug from the wall socket with wet hands.
9. Never use the appliance outside and always place it in a dry environment.
10. Never use accessories that are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
11. Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
12. Stand the appliance on a stable surface so that it cannot fall.
13. Do not place the appliance under a power socket. The power socket must not be in the hot airflow of the appliance.
14. Always position the heater in such a way that inflammable materials (such as curtains) cannot be ignited. Ensure at all times that the unit is placed solidly on its base. Make sure that the air inlet and outlet openings are not blocked. To avoid any risk of fire, do not cover the heater (ex. With clothes).
15. warning: Do not operate the heater near baths, showers, washbasins, swimming pools or any other water container. It must be impossible to reach the commands of your appliance when you are in contact with water.
16. The temperature of the grids may be very high when the appliance is in use. Avoid contact with the skin.
17. Never use the appliance near inflammable or explosive materials.
18. Do not insert any objects through the grille or into the interior of the appliance.
19. This appliance must be fixed at a height of at least 1,8 m above the floor.
22. Children of less than 3 years should be kept away unless continuously supervised.
23. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

24. CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
  25. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved
  26. Children shall not play with the appliance
  27. Cleaning and user maintenance shall not be made by children without supervision.
  28. WARNING: This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- (\*) Competent qualified service: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should return the appliance to this service.

## Specifications

Model	Voltage	Frequency	Total input Power	Class
2000	220-240V~	50Hz	2000W	II

## USE

### INSTALLATION OF THE APPLIANCE (fixed only)

- The heater should be situated at least 1.8 meter above the floor.
- The plug and power cord should be installed on height unavailable for children.
- You need the following for installation: 2 soft inserts, 2 screws, 4 gaskets (all mentioned you will find in gift box).
- Please, insert the gaskets into the holes in body.
- You should make the holes in the wall on 57cm from each other horizontally and at least on 2 m over the floor. This way the heater should be at least on 1.8 m from the floor level.
- The depth of the holes in wall should be 42-45 mm, of 8 mm diameter. The tighten screw should be protruded from the wall on 18-20 mm.
- After the heater installation, you should tighten the screws.

## **OPERATION**

When the appliance is switched on for the first time, a slight smell may be emitted. Please ensure sufficient ventilation. This smell will disappear very quickly.

## **FUNCTION SELECTOR**

1. Two heating lever (1000w/2000w)
2. Before using remote control, turn on the power switch on the side of the heater
3. just on opening the machine, the display shows the current air temperature
4. **on/off key**: while in the state of electrify; Press this key in order to switch on, the fan wheel starts revolving in the meantime, pressing this keying again one by one in order is: Low-grade, top-grade, shut-down; The display screen can show the working logo (indicator)for the low-grade, high-grade, and the breeze leaf; the breeze leaf will stop work when the machine has shut down 30 seconds ago ,the swing blade will close automatically simultaneity
5. **timer key**: press the key to change the work time.

Remote control

1. Install two "AAA"(not included) batteries as shown
2. The remote control power button is labeled as such

## **OVERHEAT PROTECTION**

This heater is protected with an overheat protection that switches off the appliance automatically in case of overheat, e.g. due to the total or partial obstruction of the grids. In this case ,unplug the appliance ,wait about 30 minutes for it to cool and remove the object that is obstructing the grids. Then switch it back on as described above .The appliance should operate normally. Should the problem persist ,please contact the nearest customer service.

## **CLEANING AND CARE**

1. Before cleaning the appliance, ensure it is disconnected from the power supply and has cooled down completely.
2. To avoid the risk of electric shock, do not clean the heater with water and do not immerse it.
3. The housing may be wiped with a slightly damp ,lint-free cloth.
4. If necessary, dust particles accumulated in the air outlet openings may be removed with a vacuum cleaner.

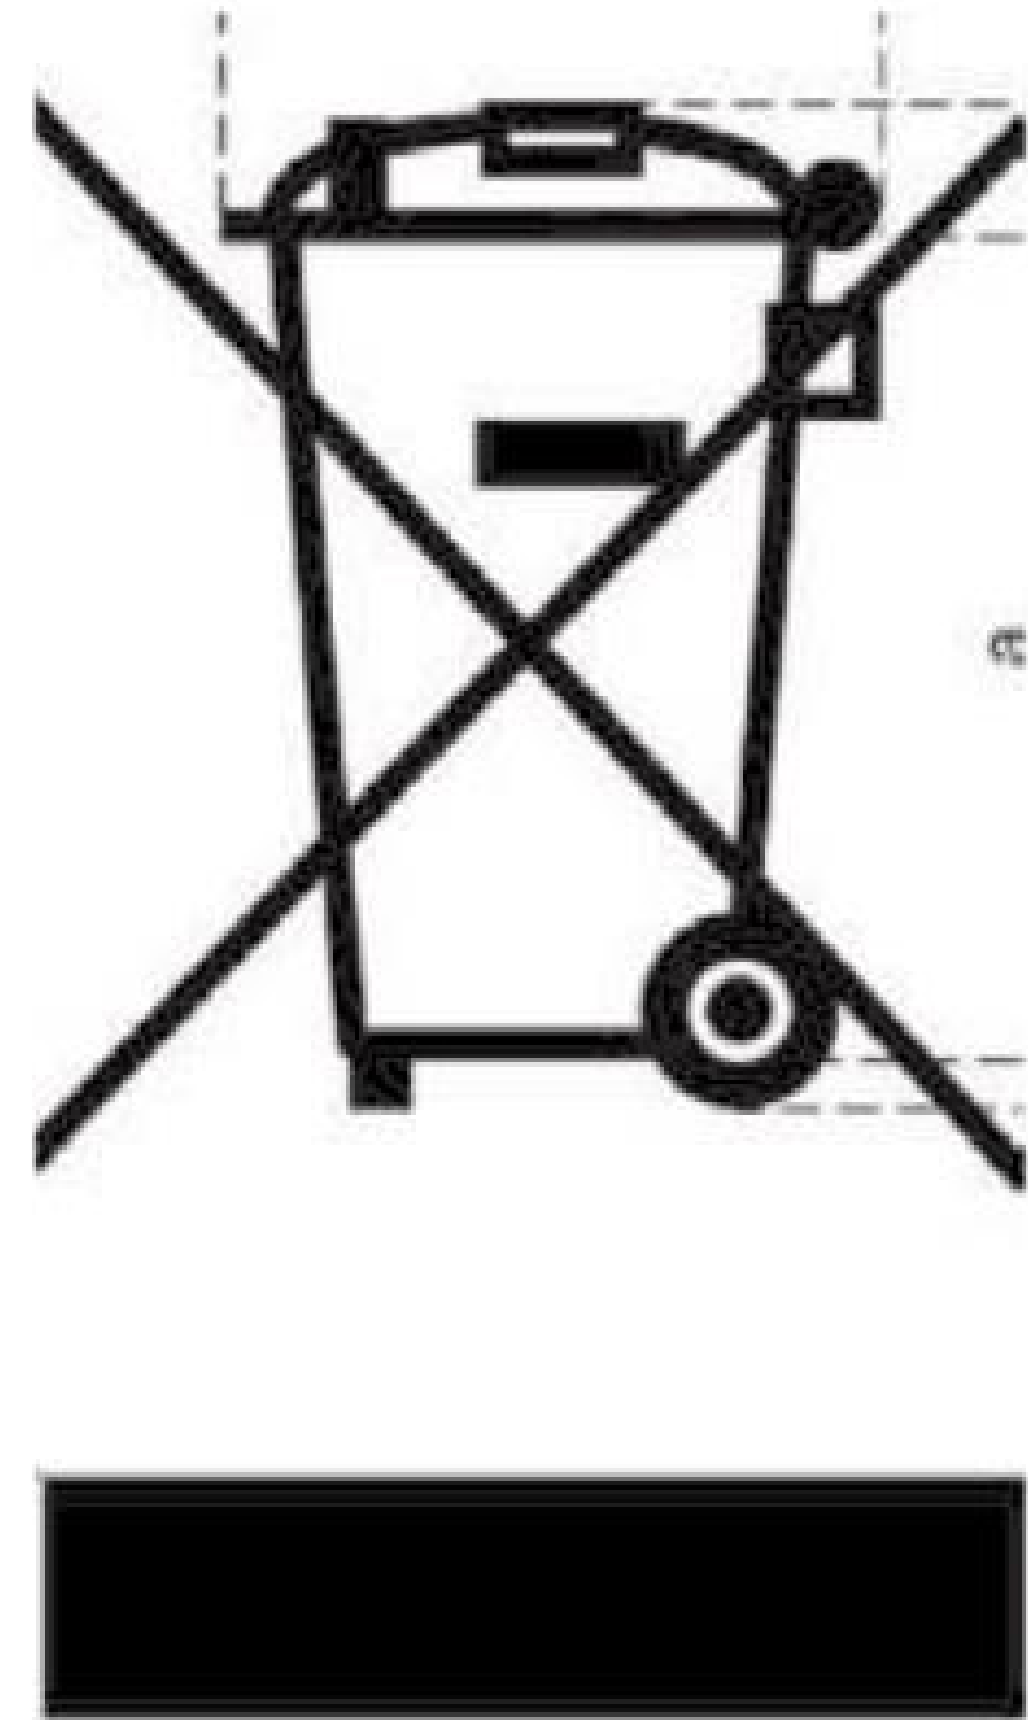
## **Information for users:**

### **Waste Electrical and Electronic Equipment (WEEE)**

All electrical and electronic equipment for private households, which is sold within the EU must fulfill the following requirements for user manual and labeling:

- 1) All electrical and electronic equipment must be labeled with symbol indication separate collection (dustbin logo)
- 2) Information for users must be given in the user manual:
  - a) requirements not to dispose equipment as unsorted municipal waste and to

- collect such equipment separately.
- b) Available return and collection systems
- c) Users role in contributing to reuse, recycling and other forms of recovery of equipment
- d) Potential effect on environment and human health as a result of the presence of hazardous substances in this equipment.
- e) Meaning of dustbin symbol.

Correct Disposal of this product	
	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>



- Zone 0** – inside of bath, washbasin – low voltage light (max12V) IPX7
- Zone 1** – just above area 0 till 2.25m high. Demand electrical appliances with IPX4 and higher standard Items have to be powered with extra low voltage (SELV transformer) placed in zone 3 or further
- Zone 2** – space from Zone 1 in width of 0,6m horizontally and 2,25 m vertical. Include parts arround window. Demend electrical appliance with IPX4 and higher standards. Items have to be powered with extra low voltage (SELV transformer)
- Zone 3** – Space out of Zone 2, extends 2,4m horizontally and 2,25m vertical. There is no any special protectiv demands for this space.

**Out of Zone 3** – allow all appliances, what means it have to be 3m horizontally far from Zone 1: from washbasin, bath and toilette.

**NOTICE:** Heater can be installed only in Zone 3

**The heater must be connected directly to the mains, and never via a switch or circuit breaker.**

\*SELV (safety extra low voltage) appliance with output voltage till 48VDC (peak 60VDC max. 200ms)

### **Warranty Information**

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances