
MANUAL INSTRUCTION

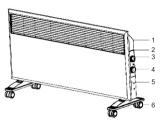

Panel convection heater

Description

- 1.Back panel
- 2.Control panel
- 3.Temperature control
- 4.Power switch
- 5.Front panel
- 6.Casters (are supplied not for all models)



Important safeguards

- The product is for household use only.
- The item should be used only as intended.
- Check item carefully before use. Do not switch on heater with defects or damaged cord.
- Placing of the item in water is forbidden.
- Plug in the item only to AC source.
- The appliance should be connected to the same voltage as pointed on the rating label and package
- The heater could be plugged in only grounded socket.
- Do not use non-standard power supply.
- Before plug in the heater, make sure that it is switched off.
- Do not use item outdoors.
- Protect the product from impacts of the sharp corners, high humidity.
- Do not touch heater with wet hands.
- If there is water on the surface of the heater, plug it out immediately.
- If the heater falls in water, plug it out immediately. It is forbidden to put hands in the water.
- Before next use the item should be checked by specialist.
- Always plug the item out after use, before cleaning or if you find the defects.
- The heater can't be carried by the cord.
- When you switch off the heater keep your hand on the plug and pull it, do not pull the cord.
- Do not wrap the card around the appliance after the use.
- Flatten smoothly the card when you do not use the heater.
- The cord could be changed only in service centre.
- Only original spare parts could be used for repair.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or metal capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Safety instructions

 
- The appliance should be connected to the same voltage as pointed on the rating label and package.
- Do not plug the item in before its not wall mounted or set on casters.
- Do not cover the item when it is operating.
- Avoid placing foreign objects in air vents.
- It is forbidden to pull and twist the cord.

Before use

- Take the heater out of the box.
- Remove the packing material
- Check the installation parts

Installation

- The panel convector heaters should be wall-mounted. Some items can be also set on casters.
- Mount casters on the baseboard in accordance with scheme G1. For wall mounting study scheme G2.
- Drill holes in the wall. The diameter of holes should be about 6 mm.
- Fix the bracket with screws.
- There should be at least 200mm between the bottom edge of the item and the floor. The distance to any other objects should be at least 200mm from the side and 500mm in front.
- Pay attention to the position of the convector with regard to other objects.
 It is forbidden to place item under the socket.
- The convector has got IP21 degree of protection
- If you place item in bathroom, avoid ingress of water on the surface.



Use of the item

- Place the heater on flat stable surface.
- Switch thermostat knob in off position .
- Plug the heater in.
- By turning the handle of thermostat clockwise or counter clockwise set the required temperature. For fast heating of the room set the thermostat handle at maximum level. As soon as required temperature will be reached, turn thermostat handle counter clockwise until you hear click. The heating elements will switch off. Indicator light will be also off.
- Convector will automatically switch on when temperatures decreases and it will automatically switch off when temperature increases. The comfortable ambient temperature is maintained.
- If the appliance is not used for a long time switch it off with power switch and plug the item out.
- Attention! Do not cover the product! Convector should not be placed under shower or in swimming pool.

Cleaning

- Before cleaning the item wait when it cools down and plug out.
- Do not use abrasives and solvents. Wipe the product with soft wet cloth.
- It is necessary to remove dust from the surface regularly.
- Washing the item and placing it in water is forbidden!
- If you are going not to use heater for long time, wipe it surface and put the item in color box.
- It should be placed in dry ventilated room. Avoid high humidity and mechanical impact on the item.

Details			
Voltage	220/240 V	220/240 V	220/240 V
Frequency	50 Hz	50 Hz	50 Hz
Power	500 /1000 W	750/1500 W	1000/2000 W

Attention: never leave heater unattended!

The importer retains his right to make changes in appearance and completeness

of the item without preliminary notification to the customer.

The item is for household use only.

Attention! The manufacturer does not assume any liability for any damage caused directly or indirectly by not following this instruction manual, general safety rules, or interference in the construction of this product.

Technical characteristics:

Voltage: 220-240V/50HZ Service life is 2 years

3